 


AMT-110 Weather Station-Thermometer

FEATURES

 
- 1) 1.5V Operate
- 2) Low Power Consumption
- 3) Weather Forecast Clock With Moon Face, Temperature and Humidity Selectable for 12 or 24 Hour Format
- 4) Date Display (Month / Date / Week)
- 5) Year Range is 2003-2052 (Default is 2003yr),Auto Adjust Week
- 6) Clock with Chime and Alarm Function
- 7) Alarm with Snooze Function (Repeat 4 Times)
- 8) Measuring Temperature Range:-50 degC ~ +70 degC
-58 degF ~ +158degF
- 9) Measuring Humidity Range : 20%RH ~ 99%RH
- 10)Display Resolution : 1 degC, 1 %
- 11)Accuracy : +/- 1 degC, +/- 5%
- 12)Max/Min Temperature and Humidity Records

OPERATION MODES

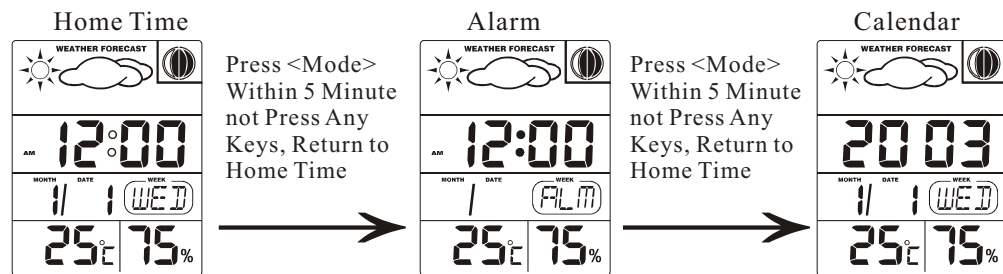

SETTING & FUNCTION PROCEDURES


1) Setting of Home Time

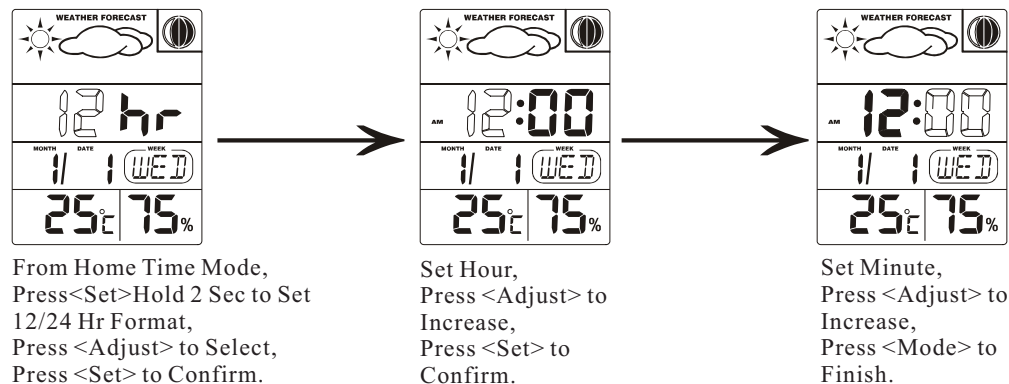

2) Function Key of Home Time

- Press <Set> to Select degC or degF
- Press <Adjust> to Select Max or Min Temperature & Humidity Record.
- Press <Adjust> Hold 2 Second, the Max or Min Temperature & Humidity Record to be Delete and then Restart the Record Automatically.

 3) Setting of Alarm

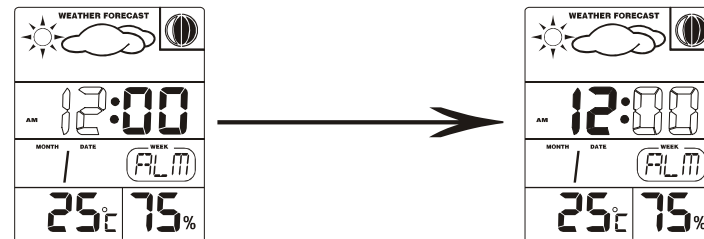


From Alarm Mode,
Press <Set> Hold 2 Sec to Set Hour,
Press <Adjust> to Increase,
Press <Set> to Confirm.

Set <Minute>,
Press <Adjust> to Increase,
Press <Mode> To Finish.

4) Function Key of Alarm

- Press <Adjust> to Open Alarm () or/& Chime () Function
- When the Alarm is Start, Press <Snooze> or Not Press Any Key, The Snooze Function Will Open and Repeat Four Times.

 5) Setting of Calendar

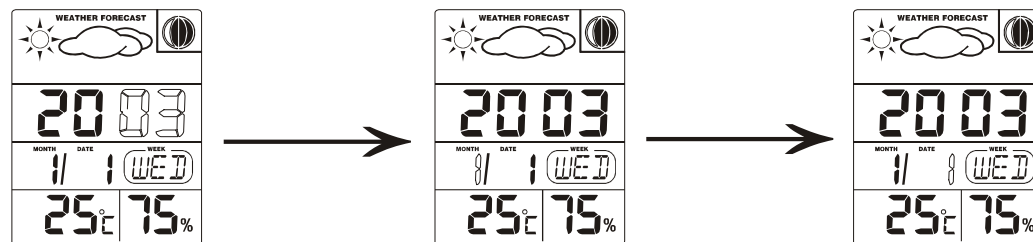

From Calendar Mode,
Press <Set> Hold 2 Sec to Set Year,
Press <Adjust> to Increase,
Press <Set> to Confirm.

Set <Month>,
Press <Adjust> to Increase,
Press <Set> To Confirm.

Set <Date>,
Press <Adjust> to Increase,
Press <Mode> To Finish.

Amtech Industry Co Ltd

Tel: +86 532 85754589 Fax: +86 532 85758711

Email: tlead@tlead.biz Web: www.tlead.biz